 


Internal Pulling Attachments

Jaw spreads from 3.8 - 22.9 cm.

Recommended for the removal of bearings, bearing cups, bushings and oil seals.

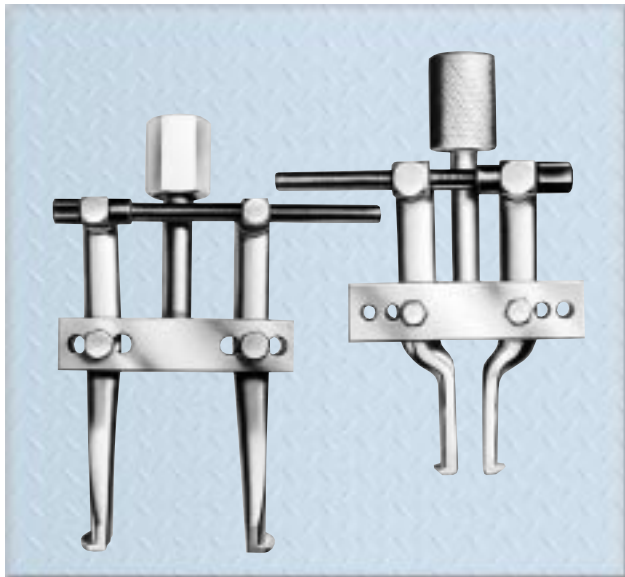


- Handles internal pulling jobs, such as, bearing/bearing cup removal, bushing removal, oil seals, ect.
- Remove hard to get at parts easily and without damage!
- Use with corresponding Power Team Slide Hammer or Push-Puller®.
- Adjustable jaws fit various diameters


Fed. Spec.: GGG-P-00781-D




▲ CAUTION: These attachments may not withstand the full tonnage of the pullers they are used with. The shape and condition of the part being pulled affects the tonnage at which the jaws may slip off. Always select the largest attachment which will fit behind the part being pulled. Refer to page 188.

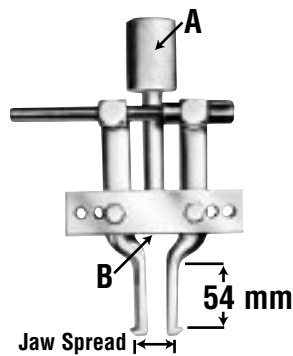


No. 1153 -
Jaw Spread: 38.1 mm -127 mm
A - Internal: 1" - 14 thd.
B - Internal: 5/8" - 18 thd.
 Wt., 1.9 kg
 Use with Push-Puller® 927 and 938

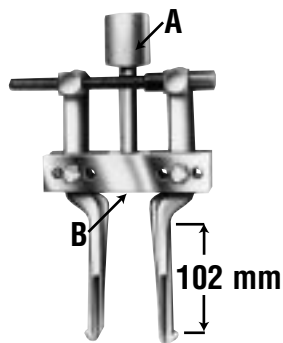


No. 1150 -
Jaw Spread: 38.1 -152 mm
A - Internal: 1" - 14 thd.
B - Internal: 5/8" - 18 thd.
 Wt., 2 kg
 Use with Push-Puller® 927 and 938

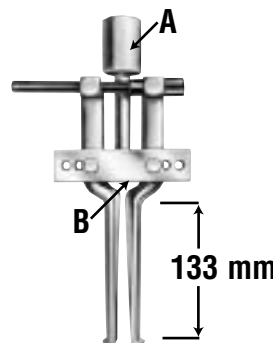


No. 1151 -
Jaw Spread: 38.1 mm -178 mm
A - Internal: 1" - 14 thd.
B - Internal: 5/8" - 18 thd.
 Wt., 2 kg
 Use with Push-Puller® 927 and 938

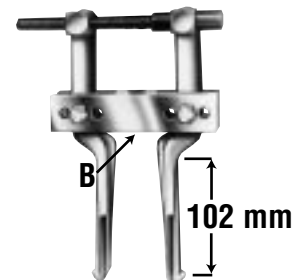


No. 1152 -
Jaw Spread: 38.1 -152 mm
B - Internal: 5/8" - 18 thd.
 Wt., 1.6 kg
 Use with 927 and 938 Push-Pullers; 1155 and 1156 slide hammers; 24832 and 24833 puller screws.

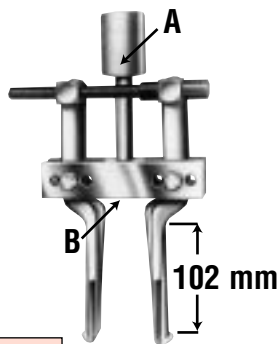

No. 1154 -
Jaw Spread: 38.1 mm -152 mm
A - Internal: 1" - 8 thd.
B - Internal: 5/8" - 18 thd.
 Wt., 2 kg Use with PPH17

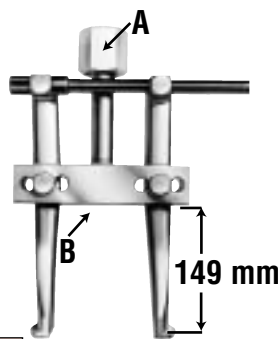

No. 1165 -
Jaw Spread: 76.7 mm -229 mm
A - Internal: 1 1/2" - 12 thd.
B - Internal: 1" - 14 thd.
 Wt., 6.1 kg
 Use with Push-Puller® 939

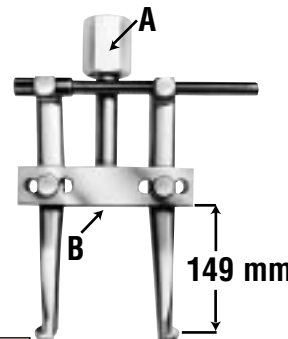

No. 1166 -
Jaw Spread: 76.2 mm -229 mm
A - Internal: 1 1/4" - 7 thd.
B - Internal: 1" - 14 thd.
 Wt., 6.1 kg Use with PPH30



For puller piece part identification, order Power Team parts catalog PC97